

Oil grade

Hydraulic oil

refer to specifications for service products page 343³⁾

Filling capacities

| Total capacity of system | Oil supply tank made of metal ¹⁾ | Oil supply tank made of plastics ²⁾ |
|--------------------------------------------------------------------|------------------------------------------------|---------------------------------------------------|
| | approx. 4.2 l | approx. 3.5 l |
| Filling capacity of oil supply tank up to marks on oil dipstick | max. approx. 2.6 l | approx. 1.8 l |
| | min. approx. 2.0 l | approx. 1.2 l |

¹⁾ Models 107.02, 114, 115; models 116 up to Nov. 1975.

²⁾ Model 116 starting December 1975, models 123, 126 starting begin of production.

³⁾ Available in 1-liter cans part no. 000 989 85 03.

Perm. oil consumption

For 10 000 km

 
max. 0.4 l

Special tools

Filling funnel with filter



126 589 12 63 00

Box wrench insert open 11 mm 1/4" square,
complete with change-over ratcheted and 2 extensions
for pressure oil lines


116 589 00 17 00

Conventional tools

Open double-box wrench 10 x 11 mm

e.g. made by Hazet, D-5630 Remscheid
order no. 612

Open double-box wrench 12 x 14 mm

Note

For tightening pressure lines, use open box wrenches, but by no means standard open-end wrenches, to avoid damaging line connections. For better accessibility of individual line connections, for example on level controller, a special wrench has been developed.

For hollow screws and screw connections use only solid copper sealing rings of specified dimension. Renew sealing rings on principle.

Attention!



Pressure oil pumps MB and Teves operate on self-lubrication, that is, the delivered oil serves simultaneously as a lubricant.

In the event of a defect on level control system which leads to complete loss of hydraulic oil, and when vehicle cannot be repaired immediately, make sure that pressure oil pump Teves is not drawing any air. If required, remove driver of pump drive.

On engines 615, 616, 617, 116 and 117 do not remove driver together with pressure oil pump MB in the event of a defect on level control system, since otherwise the running engine will damage the intermediate gear shaft and the camshaft.

Draining the system

1 Open bleed screw (11a) on distributor (1st version up to February 1977) or on level controller (2nd version starting March 1977) and catch the oil (approx. 0.5 l) in a suitable, clean vessel.

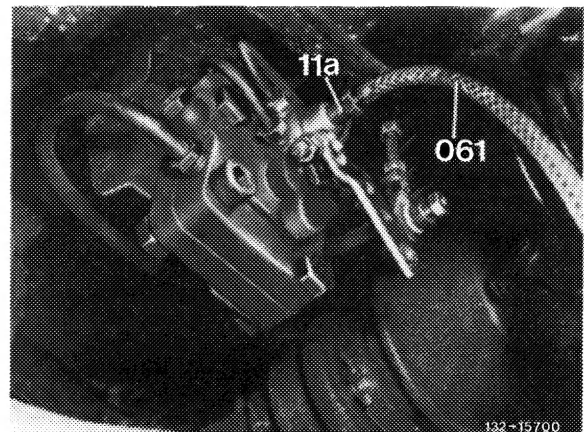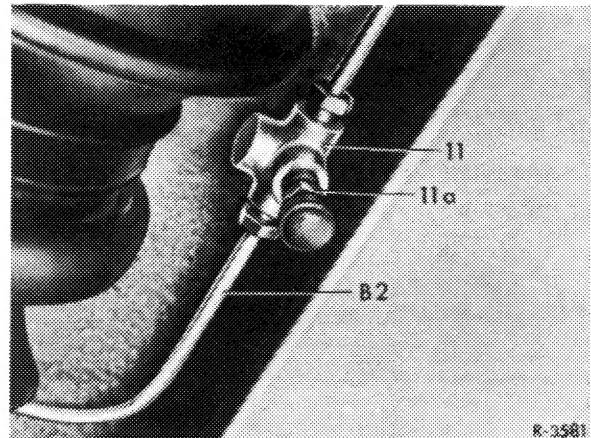

11a Bleed screw
061 Oil drain hose